

移动智能终端



使用指南



电源键

短按:点亮屏幕,锁定屏幕。

长按:关机状态下,长按2—3S开机;使用状态下,长按2—3S,可选择关机重启。死机状态下,长按11S,自动重启。

音量键

调节音量大小(该案件可设置为快速扫码键,需要应用支持)

返回键

点击返回之前屏幕

主屏按键


点击可快速回到主屏幕

菜单键

点击可快速查看后台运行的程序;选择应用程序并侧滑,即可关闭此应用。

打印机

用于开机状态下打印单据。

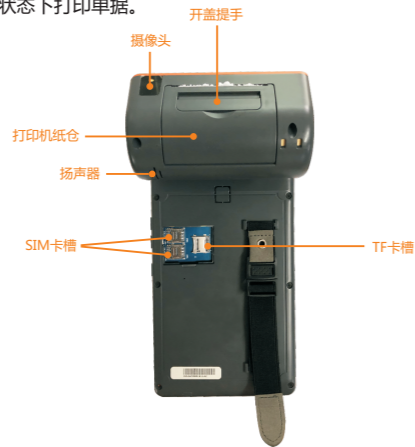

摄像头

用于扫码时需在近距离(6—20cm)内。



Power key

Short press:turn on/off the screen.

Long Press for 2-3s to power on/off the machine.

Long press for 11s to restart when system halt.

Volume

Volume up/down (settable as Quick scan Button in applicable condition)

Back key

Click to return to the previous

Home key

Click to return to the main screen quickly.

Menu key

Click to quickly view the background running program.Select and side slip, application can be closed.

Printer

To print bills and receipts.



Camera

Barcodes should be placed within a distance of 6-20cm during scanning.



User manual

打印说明

本机支持58mm热敏打印纸

- 1.请通过开盖提手开启打印纸仓,勿强行打开纸仓,防止打印头齿轮磨损;
- 2.将打印纸正确放入纸仓,并拉出部分纸至切刀外盖好纸仓盖,打印纸安装完成。
- 3.APP软件打印请选择蓝牙打印,选择相对应蓝牙名称,再打印。

注意:如果打印内容空白,请检查纸卷方向是否放反。



充电及电池说明

- 1.本机支持座充和USB线充两种充电模式;
- 2.正在充电,屏幕会有相应图标显示;
- 3.若无出现充电图标,请检查USB线接口是否松动。


电池说明/注意事项

- 1.本机选用的是7.4V 2000mAH的不可拆卸的内置锂电池,请勿自行拆卸;
- 2.为保护电池的寿命,建议随时充电,不要等到电池耗尽后再充电;

Print instructions

The machine supports 58mm thermal printer

- 1.To load a fresh roll of receipt paper, lift the latch on the printer compartment and pull out cover. DO NOT forcibly open the cover to prevent wearing of printing head;
- 2.Unwrap the roll of paper, keep the roll taut, and insert as shown. The paper is installed
- 3.Select Bluetooth print on APP. Choose corresponding Bluetooth name then print.

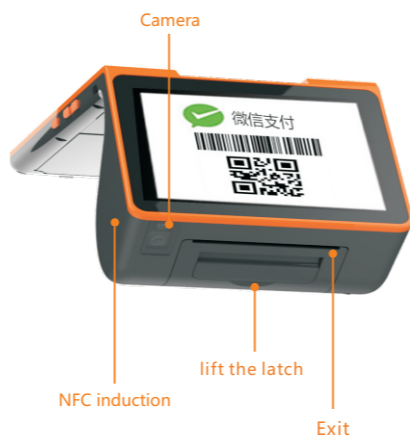

Charge and battery description

- 1.Charging modes: 1. Power socket charging 2. USB charging.
- 2.Charging indication icon should be shown on screen during charging.
- 3.If there is no charging indication icon, please check USB cable interface.

Battery instructions/precautions

- 1.Machine is built in a non-removable lithium battery of 7.4v 2000mAH. Disassembly is prohibited with permission.
- 2.To protect and sustain battery lifetime, please charge regularly. Do not leave battery unused for long time, no matter it is in device or inventory.

概述

开启设备,只需几步

- 1.需要GPRS网络,关机状态下,打开卡槽盖,插入SIM卡,再开机。
- 2.长按电源键2-3S,屏幕点亮,进入首次开机界面,按提示操作即可。本机可选择2种上网模式。
- 3.WIFI设置

点击【设置】按钮,然后开启WIFI,进入WLAN界面,等待其搜索并列出可用的WLAN热点;若选择一个加密的网络,则需要输入访问密码方可连接。

如何下载应用

相关应用可在联网模式下,打开应用市场,浏览并下载应用即可完成安装。

常见故障排除

打印机不工作

- 1.请确认纸仓盖子正确关闭;
- 2.确认使用合适的打印纸,并正确安装;
- 3.请检查纸仓是否放置了57*30mm的热敏打印卷纸;
- 4.打印空白内容时,请检查卷纸是否放反。

开不了机(如:设备电量过低)

- 1.将机器连接充电器到插座上,充电3分钟;
- 2.检查屏幕是否正常显示充电状态;

死机怎么办

长按电源键11秒,进入重启状态。

包装内容

- 1*主机
- 1*USB线
- 1*电源适配器,1*充电底座
- 1*用户指南(含1*保修卡,1*产品合格证)

Summary

Power On and Wireless Connection

Machine support both GPRS and WIFI.

GPRS Setting

At power off status, open card slot cover and install a SIM card. Long press power button for 2-3s to power on, follow the clue to finish setting.

WiFi Settings

Open "Setting", go to WLAN, and enable WiFi. Select the network you want to connect to. Depending on the network settings, you may have to enter a password. Follow the onscreen instructions to complete authentication if required.

How to download Apps

Apps can be available from Google Play store or local app stores. Search and download apps you want in network connected condition.

Common trouble shootings

Printer not working

- 1.Ensure the printer cover is closed well.
2. Ensure use of appropriate paper and installed correctly;
- 3.No use of 57*30mm thermal printing paper

Cannot Power on (e.g.: Less power)

1. Charge the device with power socket for 3 minutes;
2. Check whether the screen charging status is normally;

System Halt

Long press power button for 11 seconds then machine would reboot.

More help

After startup, please check the application [user guide]

Accessories

- 1*USB Cable
- 1*User Manual
- 1*Power Adapter,1*Charging base
- 1*Warranty Card,1*Qualified Certification

注意事项

安全警告

- 1.请将交流电插头与配件电源适配器上标识输入相对应的交流电插座中;
- 2.严禁在存有任何潜在爆炸性气体的场所使用;
- 3.非专业人员不要随意打开电源适配器以免发生危险;
- 4.此为A级产品。在生活环境中,该产品可能会造成无线电干扰。在这种情况下,可能需要用户对于干扰采取切实可行的措施。

关于电池的更换

- 1.避免在雷电期间安装或使用,否则有被雷电电击的危险;
- 2.充电期间,当您发现有异常气味,过热或烟雾情形下,请立刻切断电源;
- 3.请勿在无人看守的情况下充电,充满电后请及时拔掉电源。
- 4.撕纸刀较锋利,请勿触碰!

建议

- 1.不要在靠近水或潮湿的环境中使用,避免液体落入终端中;
- 2.不要在极冷、热环境中使用,例如靠近火源或点燃的香烟;
- 3.不要摔、投掷或弯折;
- 4.尽量在清洁无尘的环境中使用,避免细小物品落入终端中;
- 5.在未获允许的情况下,不要在医疗设备附近使用。

声明

本公司不对以下行为负责:

- 1.不在本指南说明的条件下使用和维护所造成的损坏;
- 2.对于如何因选件或耗材(非本公司提供之最初产品或认可产品)造成损坏或问题;
- 3.本公司不承担任何责任,未经本公司同意,无权进行产品修改或变动。

免责声明

由于产品的更新,此文档的某些细节可能与产品不符,请以实物为准,此文档解释权归本公司。保留不预先通知的情况下,修改本说明书的权利。

Notice

Safety warning

- a) Use the original power plug and cable and follow local electric standards and regulations.
- b) Prohibit use in any potential explosive circumstance.
- c) Disassembly of power adaptor is prohibited.
- d) Radio interference may happen. take effective measures to prevent it.

With regard to battery replacement:

- a.Replace the wrong type of battery may cause explosion!
- b.Please do not put the old battery into fire!

Important safety instrctions

- a.Avoid the installation & use in case of lightning. Attention shock danger!
- b.Cut off the power in notice of abnormal smell, over heat or smoke.

Statement

ZKC doesn't take the responsibility for following conditions

- a.Damages caused by any inappropriate use and maintenance.
- b.Any disassembly of device & accessories without our consent.
- c.Damages caused by natural disasters or man-made reasons.
- d.Any alternation without permission.

Disclaimer:

ZKC reserves the right to change this manual without prior notice.

注意事项

产品名称: _____

产品型号: _____

产品编号: _____

购买日期: _____

保修期限: 自购买日起,我公司提____天保修服务。

以下情况恕不提供免费保修:

- 1.未经允许擅自拆卸修理的产品;
- 2.产品条码、易碎贴破损及保修卡涂改、残缺的;
- 3.未按照说明书的要求操作设备所引起的故障;
- 4.因进水或跌落而造成的故障、划伤等人为损坏;
- 5.因不可抗拒因素造成的故障或损坏;
- 6.保修期限外。

联系信息

公司地址: _____

联系电话: _____

产品合格证

产品名称: 移动智能终端

产品型号: _____

产地: 中国深圳

Warranty Card

Product name: _____

Product model: _____

Item No: _____

Purchase Date: _____

Warranty period: From the date of purchase, we provide _____ days warranty.

Warranty free except following situations

Without permission, disassemble and repair the product.

1. Product barcode, fragile stickers warranty certificate missing or damaged.
- 2.Fault caused by operation not in accordance with the requirements of the manual.
- 3.The fault caused by falling into water or man-made damage, scratches etc.
- 4.Fault or damage caused by force majeure factors.
- 5.Out of warranty.

Contact information

Company address : _____

Contact number : _____

Qualified certificate

Product Name: Intelligent terminal

Inspector: _____

Place of origin: Shenzhen